
## **Powerdot**

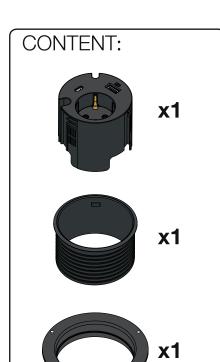








INSERT Insert grommet into the hole, then feed the plug all the through the threaded fastening nut.

TURN CLOCKWISE & PLUG IN
Turn the fastening nut as far up the thread as possible. Make sure that it has been thoroughly tightened. Plug the Schuko plug into a wall socket or powerstrip of your choice. Lastly, connect the the USB-C cable to intended device.

Note! The fastening nut has 3 holes for fixing with wood screws.

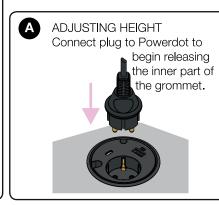

B RELEASE INNER PART Rotate plug counter-clockwise to release the innert part.




ADJUSTING HEIGHT
The inner part should now be loose. Adjust to desired level - see box: ADJUST LEVELS



Note! Pay attention to the locking geometry as it will help with adjusting the inner part to the desired level.





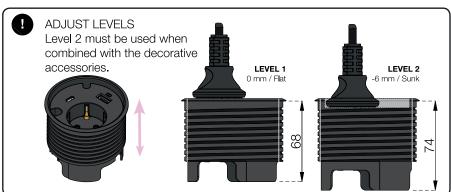




LOCKING POSITION





 



- 935-PD16W
- 935-PD16




Powerdot - 1 Schuko, 1 USB/A charger. (5V 2A), 1 USB/C port, 2 Feed throughs (Ø7, Ø9.5 mm)

## Front view (Grommet)

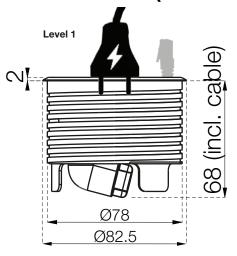


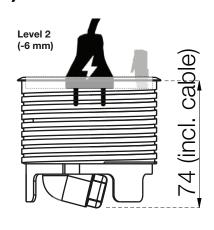

## Bottom view

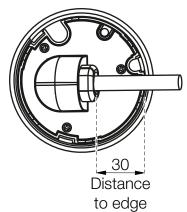

## Oriented view (Grommet, nut & cable)

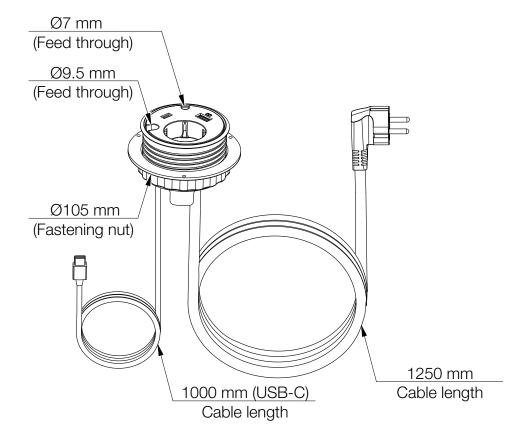

Maximum table thickness: Recommended hole cut: 30 mm Ø79 mm